


HOW TO INSTALL SLIDE BOLTS

Place the edge of the slide bolt flush with the edge of the roller door in the first groove.

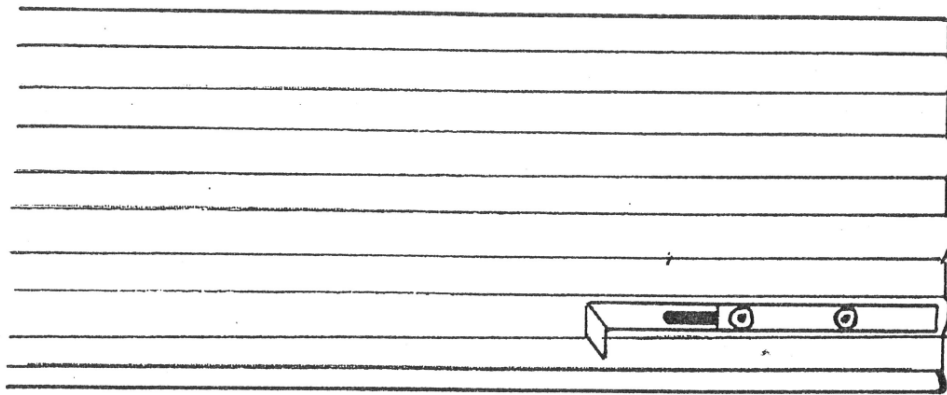

Drill two (2) holes and fit bolts provided.

DO NOT OVER TIGHTEN

Drill a slot for the slide bolt to go through in the roller door track. Slide bolt through slot and place a padlock through the hole.

